



# **Digital electric actuator CENTORK 460 Series**



**Installation and maintenance  
user's manual**



## INDEX

1.	CENTORK ELECTRIC ACTUATORS .....	3
2.	SAFETY INSTRUCTIONS.....	3
3.	TRANSPORT AND STORAGE .....	3
3.1	Transport.....	3
3.2	Storage.....	3
4.	SERVICE conditions FOR ELECTRIC ACTUATORS.....	4
4.1	Electric actuator: Main description and purpose.....	4
4.2	Temperature range .....	4
4.3	Actuator and motor duty service .....	4
4.4	IP protection degree.....	4
4.5	Painting and protection against corrosion.....	4
4.6	Electronic features .....	4
5.	MOUNTING TO THE VALVE .....	6
5.1	Pre-Installation Inspection.....	6
5.2	Output size .....	6
5.3	Output type.....	6
5.4	Mounting: .....	6
6.	MANUAL OPERATION .....	6
7.	ELECTRIC AND ELECTRIC CONNECTIONS.....	7
7.1	Wiring diagram (electric manoeuvre).....	7
7.2	Terminal plan and wiring.....	7
8.	FRONTAL INTERFACE .....	8
8.1	Torque and position control and measurement electronic Unit .....	8
8.2	Menu routines and screens.....	8
8.3	Main menu .....	9
8.4	Operational Data submenu (SCREEN 4) .....	9
8.5	Settings (SCREEN 2).....	10
9.	SETTING AND PRELIMINARY TEST.....	14
9.1	Sense of rotation actuator and valve .....	14
9.2	Motor and power supply (Sense of rotation).....	14
9.3	Closed position limit switch setting .....	15
9.4	Open position limit switch setting.....	15
9.5	Close Torque switching setting .....	15
9.6	Open Torque switching setting .....	15
9.7	Intermediate limit switches.....	15
9.8	4-20 mA Position transmitter (OPTIONAL): TPS.....	15
10.	MAINTENANCE.....	16
10.1	After commissioning.....	16
10.2	Maintenance for service .....	16
10.3	Electric actuator's service life .....	16
10.4	Batteries .....	16
11.	TECHNICAL SUPPORT .....	17
12.	APPENDIX.....	17



**CAUTION: CENTORK electric actuators are a high value devices. In order to prevent damage in their handling, setting and use it is essential to follow and observe all the points in this user manual, operate under actuators' designated use, and observe health and safety rules, standards and directives, as other national regulations as well.**

**CENTORK electric actuators must be handled with care and caution.**

### IMPORTANT NOTE

**The contents in this manual is subject to change due to the quality improvement, without individual notice.**



## 1. CENTORK ELECTRIC ACTUATORS

The electric actuator is a device designed to be coupled to a general purpose industrial valve to carry out its movement. The movement is stopped by limit switching or by torque (thrust) switching.

## 2. SAFETY INSTRUCTIONS

The scope of this manual is to enable a competent user to install, operate, adjust and inspect a CENTORK electric actuator. These instructions must be observed, otherwise a safe operation of the actuator is no longer warranted.



**As electric device, during electrical operation certain parts inevitably carry lethal voltages and currents (ELECTRICAL RISKS). Work on the electrical system or equipment must only be carried out by a skilled electrician himself or by specially instructed personnel, in accordance with the applicable electrical engineering rules, health and safety Directives and any other national legislation applicable.**



**Electric actuator devices are a high powerful apparatus. A negligence handling might cause severe damages to valves, people, and actuator as well. Under no circumstances should any modification or alteration be carried out on the actuator as this could very well invalidate the conditions which the device was designed.**

## 3. TRANSPORT AND STORAGE

### 3.1 Transport

- CENTORK electric actuators must be transported in sturdy packing. During transport measures should be adopted in order to prevent impacts, hits. CENTORK delivers its actuators ex-work.
- Hits or impacts against wall, surfaces or objects might cause severe damage on electric actuator. In this cases, after such events, a technical inspection must be done by CENTORK technicians.
- Do not attach to the handwheel ropes or hooks to lift by hoist.

### 3.2 Storage

- **Store in a clean, cool, dry and ventilated place. For other storage conditions or, and long time periods (More than 5 months) contact to manufacturer.**
- Check that electrical connection cover and switching and signalling unit cover and are correctly closed and tight.
- Cable entries on electrical connection cover must be sealed. Protection plug supplied by CENTORK are only adequate for storing in dry and ventilated places, for short period of time. In other conditions **protection plug must be replaced with metallic plug sealed with PTFE tape.**
- Do not store the actuator directly on the ground!
- Cover it to protect it from dust and dirt. Cover the machined parts with suitable protection against corrosion.
- Do not handle it by picking it up by the handwheel.
- **Just when commissioning, CENTORK recommend a visual inspection in order to detect any anomaly caused during the transport, and during the storage as well. Checking should include a visual inspection of electric compartment, and switching and signalling unit shouldn't be opened .**
- For further details, consult the technical sheet 'Conditions for Transport and Storage'.

## 4. SERVICE CONDITIONS FOR ELECTRIC ACTUATORS

### 4.1 Electric actuator: Main description and purpose

- Electric actuator is an apparatus or device formed by a electric motor, coupled to a main gearbox unit, which transmits motion and torque to valves. An electronic unit formed by electronic boards and sensors, inside of electric actuator, allows to provide continuous torque measurement and control, and continuous position measurement and control.
- Electronic device activates settable output relays which allows torque and limit switching operation. **Limit and torque switches relays must be included on the electric manoeuvre in order to prevent overloads on valve and actuator which might cause a fatal damage on valve and actuator, Electric motor are powerful devices.**
- Electric actuators series 460 can be operated using an external electric cabinet, or employing CENTRONIK units. For more information, consult CENTORK.
- Electric actuators actuators are provided with a declutchable manual override system in order to operate manually in case of emergency or fail of oil supply.
- Electric actuator can be coupled directly to valve, or maybe, through gearbox units (Bevel, spur and worm gearboxes)

### 4.2 Temperature range

CENTORK electric actuators work in a temperature range from -25°C to +70°C.

### 4.3 Actuator and motor duty service

- Electric actuator series 460 have been designed for valve motorization which requires ON-OFF and inching (Modulating) duty service.
- Electric actuator can run continuously at nominal torque. Nominal torque is rated to 50% of max tripping torque (100%), value marked on actuator nameplates. Higher nominal torques can reduce the actuator's service life.
- Max torque is only recommended for short period of time, not exceeding 10% of total operation time.
- Electric motor has been designed to operate under severe conditions. Motors have been designed for S2 short duty and S4 modulating duty. For more technical details, contact CENTORK.

### 4.4 IP protection degree

- CENTORK electric actuators are designed in their standard version with IP67 (acc. EN 60.529) environmental protection although IP68 protection may be supplied on request. **IP67 and IP68 protection degree is only guarantee employing proper protection plug and cable gland for cable entries**, according to IP degree (See chapter 7) . It is necessary to observe storing and maintenance rules written on chapter 10 as well.

### 4.5 Painting and protection against corrosion

- As standard, CENTORK has designed three protection degree: Standard protection, P1 and P2. For technical details, consult CENTORK.
- Electric actuator are coated with a epoxy- two components primer (Film thickness depends on protection class selected, actuators are coated with intermediates primers) followed by a polyurethane component paint coat. The standard colour is blue RAL 5003. Other colours are possible (Option). Other film thickness under request.

### 4.6 Electronic features

- Local indication: A LCD display 48 character control panel including the following information:
  - Valve position and Torque (Percentage)
  - Actuator status (Outputs relays)
  - Serial number
  - Operations Data (Recorder): This menu indicates the number of the following information: Opening Operations, Closing operations, Open torque Faults, Close torque faults, Thermal faults, Number of cycles,
  - Settings menu: Menu Protected by password. Adjust the following data:
  - Set Open Position 0% (Adjust the close position)

- Set Open position 100% (Adjust the open position)
- Open Torque Value (Adjust the Open torque value for torque switching)
- Close Torque Value (Adjust the Close torque value for torque switching)
- Intermediate limit switching (Adjust middle travel, %; limit switch)
- Alarm settings
- TPS setting: Adjust of analogue position transmitter: 4/20mA or 0/20 mA, direct or reverse polarity
- TTS Setting: Adjust of analogue position transmitter: 4/20mA or 0/20 mA, direct or reverse polarity
- Relays setting: 4 relay configurable, 7 relays as option.
- Language setting : English, Spanish, German, French and Italian. Other languages under request.
- Four LED for main indication:
  - Red/green LED indicator (LED1 and LED4): Red "ON": Valve fully opened / Green "ON": Valve fully closed
  - Red LED indicator (LED2): Red "ON": Alarm activated
  - Yellow LED indicator (LED3): Yellow "ON": Valve in intermediate position
- Position control:
  - A position encoder, incorporated in the actuator, design permits continuous monitoring of valve position during motor and hand wheel operation.
  - The calibration may be done with the control panel.
  - Maximum allowable actuator stroke= 100.000 turns (Output shaft)
- Torque Control:
  - Two force sensors, incorporated in the actuator PTCS, allows continuous monitoring of valve torque during motor and hand wheel operation.
  - Tripping torque can be adjusted from 40% up to 100% of maximum Torque, (According to electric actuators range) independent for each rotation sense (Open and close).
- Motor thermal protection: The motor is protected against overheating by thermistors embedded in the motor windings.
- Position and Torque switch: 4 programmable Bistable relays, 24VDC/250VAC (Standard) and up to 11 programmable relays (Optional)
- Position and torque analogue transmitters TPS and TTS (Optional):
  - TPS Analogue position transmitter (2 wire 0/20mA or 4/20mA programmable).
  - TTS Analogue Torque transmitter (2 wire 0/20mA or 4/20mA programmable)
  - Both sensor receive supplied from internal voltage source.
- Serial communication (Optional): Serial communication RS232, permit to read/write all the data of the actuator, for setting and maintenance facilities.

## 5. MOUNTING TO THE VALVE

### 5.1 Pre-Installation Inspection

- Verify the actuators nameplate to insure correct model number, torque, operating speed, voltage and enclosure type before installation or use.
- It is important to verify that the output torque of the actuator is appropriate for the torque requirements of the valve and that the actuator duty cycle is appropriate on the intended application

### 5.2 Output size

Check whether actuator output flange suits the flange of the valve to be driven. The latter should have been designed following the ISO5210 or ISO5211 standard, for standard application, or following the customer's specifications, for special application.

### 5.3 Output type

Check that the type of flange-coupling of the actuator suits the valve to be driven (diameters and lengths). Those manufactured as Standard at CENTORK follow the ISO5210/5211 standards. Types of output drive:

- Output type A: If not otherwise specified in the order, it is supplied blank. The thread must be machined according to the stem of the valve to be driven. For the dismounting and machining of this type of output, see Appendix . Output type A models can withstand axial loads and torque
- Output type B1, B2, C: It is supplied machined to the dimensions stated in the ISO 5210/5211 or DIN 3338 standard. Output type B and C models cannot withstand axial loads.
- Output type B3, B4: It is supplied blank. For the dismounting and machining of this type of output, see Appendix .

### 5.4 Mounting:

- Once the size and the type of output match the valve to be driven, we can go on to the following step.
- Degrease the mounting surfaces at actuator and valve thoroughly.
- Slightly grease the input shaft of the valve to be driven.
- Fit the actuator into the valve. In the event of a threaded output (type A), use the handwheel for turning the nut over the threaded stem.
- Do not lift the actuator by the handwheel
- The actuator may be mounted in any position
- Using ISO Class 8.8 quality bolts, fasten crosswise controlling the applied torque according to the table in Appendix


## 6. MANUAL OPERATION

- CENTORK actuators are fitted with a handwheel for the manual actuation of the valve.
- In the case of simultaneous motorised and manual working, the motorised one will always be the preferential one.
- Once the handwheel has been engaged is not possible to disengage, **the override engagement lever returns automatically to motor position when the motor is operated.**



Engagement of manual operation:

- Turn the change-over lever 20° clockwise while slightly turning the handwheel.
- When you notice an increase in the resistance of the wheel, the manual control is engaged.
- Run the valve in the desired direction. Standard sense of rotation is clockwise to close. For greater operating speed you can connect any power tool, pneumatic or electric, to the hand-wheel shaft. The maximum speed is 150 rpm.

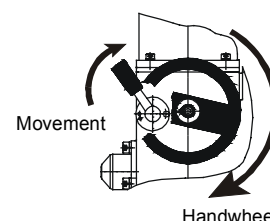



## 7. ELECTRIC AND ELECTRIC CONNECTIONS



### CAUTION:

When handling electric equipment, take into account the health and safety standards (EN 60204, 73/23/EEC directive) and any other national legislation applicable.

### 7.1 Wiring diagram (electric manoeuvre)

Electric actuator must be controlled by a external electric cabinet with all elements needed (Transformer, contactors, relays, lamps, fuses...) Wiring diagram should be designed according to electric actuator features. Electric actuator datasheet, supplied with the actuator, includes a **PROPOSED WIRING DIAGRAM**, delivered with other technical documentation.



The following points should be observed:

- We recommend to switch off the corresponding contactor/relay always directly by the limit or torque RELAYS (opening and closing). **Torque RELAYS must be included on Electric/electric manoeuvre in order to protect actuator and valve from undesired overloads.** Each valve manufacturer decides whether the switching off at both ends is made by torque switching (RELAYS) or by limit switching (RELAYS). Electric features of RELAYS are included on appendix.
- **The maximum delay for switching off the motor with the signal of the torque or limit RELAY cannot exceed 40 ms.**
- **Torque RELAY signals are non-maintained signals, when motor stops after a over-torque condition torque signals may reset (Non-maintained). Relays or another device must be employed (See wiring diagram on APPENDIX)**
- **Capacitors** for single-phase A.C. motors are delivered with electric actuators. They should be installed on electric cabinet (External). Each capacitor is dimensioned according to motor voltage and power.
- CENTORK actuators are provided with **thermo-switches** mounted in the windings of the motor (TRM). **The protection of the motor is only achieved with a proper connection for these thermostats. Centork guarantee for the motor is not valid if this connection is not properly done. DC motor do not have thermo-switches on windings. Max current should be limited.**

Features of electric and electronic components listed on appendix. Wiring diagram are included on appendix: D0105X1 for A.C. three-phase, D0107X1 for A.C. single-phase.

### 7.2 Terminal plan and wiring

The electric connection diagram or terminal plan is depicted on **Electric actuator datasheet**, supplied with the actuator, and it can be found printed on a label inside of electrical compartment cover.

- Open the electrical cover
- Feed the cable(s) through the cable glands . Fix proper cable glands according to IP67 or IP68 protection degree.



Figure 6.1



Figure 6.2



Figure 6.3

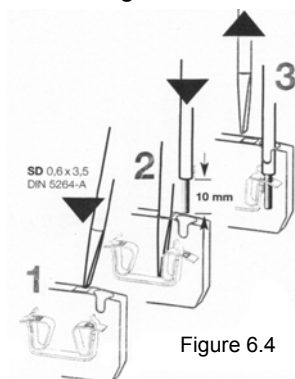


Figure 6.4

#### Electric actuator with Plug-socket connectors with screws


- Unscrew the attachment plate from the connection cover.
- With a suitable screwdriver, connect the cables for the control signals according to the electric connection diagram. (Figure 6.1)

Electric actuator with Terminals connection

- With a suitable screwdriver (SD 0,6x3,5 DIN 5264-A), connect the cables for the control signals according to the electric connection diagram. (Figure 6.2 and Figure 6.4)



**CAUTION:**


- Connect the earth cable terminal  to the earth connection located inside of electric connection cover (M5 screw hole). Electric actuator has a external bolt in order to connect an external earth terminal.
- Once you have checked that the connections have been properly carried out, close the connection cover and check the proper connection, the state of the o-ring seal and the proper installation of the latter, greasing it slightly. Fasten the 4 screws crosswise.



- **Fix proper cable glands according to IP67 or IP68 protection degree. Replace the protection plug with suitable metallic protection plug sealed with PTFE . (Figure 6.3) Tighten cable glands and protection plugs to ensure enclosure IP67 (IP68 if applicable).**



**8. FRONTAL INTERFACE**

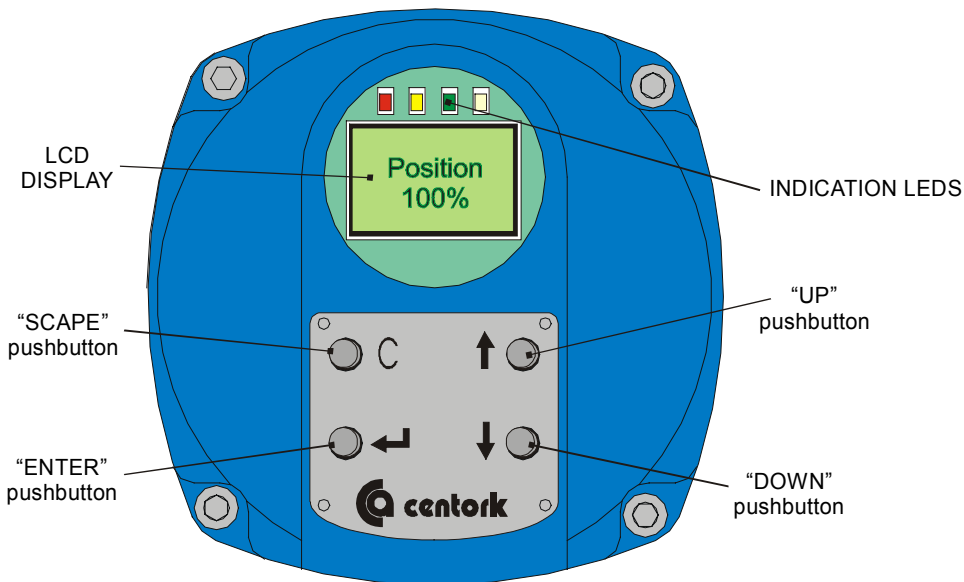

**8.1 Torque and position control and measurement electronic Unit**

The figure depicts the frontal interface of the DIGITAL electric actuator. It is not necessary to open the frontal panel during the first years. For main maintenance and start-up routines user do not need to open this cover. CENTORK recommend no to do it, in order to keep the Protection degree (Sealing).

For batteries changes, and battery description see chapter 10.4.


**8.2 Menu routines and screens**

A LCD display allows user to set and communicate with the actuator. Two screens or menus categories can be found:

- Main menu
- Settings and Operational data submenus


### 8.3 Main menu

Pressing “UP” and “DOWN” pushbuttons, user can access to different information.

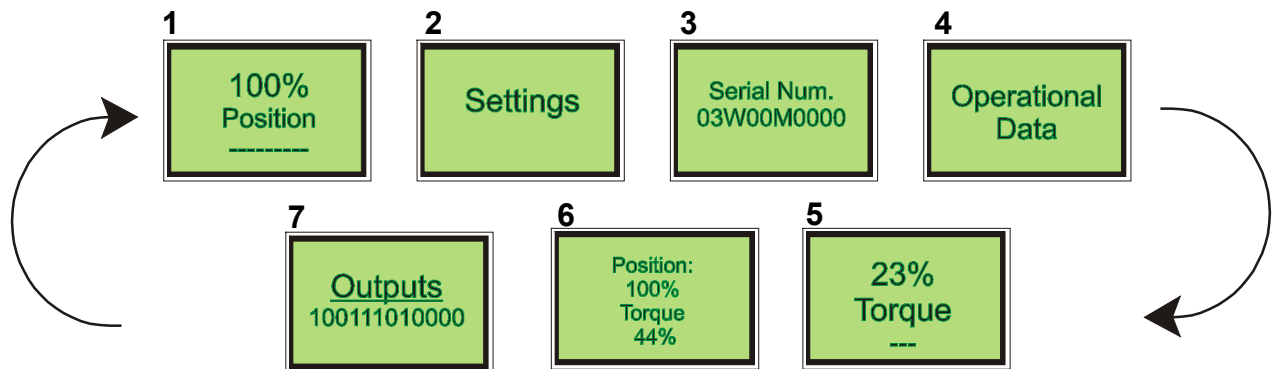

### 8.4 Operational Data submenu (SCREEN 4)


- Pressing “UP” and “DOWN” pushbuttons navigate through main menu screen until “Settings” screen is selected.
- Then press “ENTER” to confirm and get into setting menu.
- Navigate through screens to access to information:

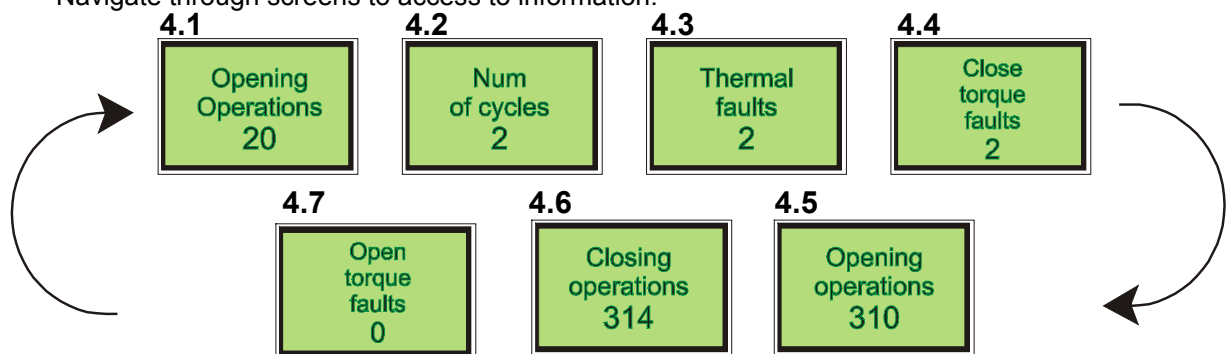

- Press “ESCAPE” to return to Main Menu


## 8.5 Settings (SCREEN 2)

- Pressing “UP” and “DOWN” pushbuttons navigate through main menu screen until “Settings” screen is selected
- Then press “ENTER” to confirm and get into setting menu.
- A password screen will appear. User should introduce the password number. Default password code is 0123. User can change this password code.
- Pressing “UP” and “DOWN” select the first code or digit. Then press “ENTER” to confirm. Automatically the second code or digit will flash or blink, waiting for confirmation or change. Select the second code
- Repeat this steps until the complete code is introduced.

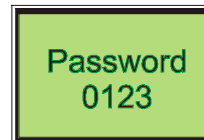

Wrong codes causes that program automatically escapes to main menu. If user makes a mistake in one code, it is not possible to go back. It is necessary to escape and enter again to “Settings” menu.

Setting menu is formed by several submenus, explained in following chapters.

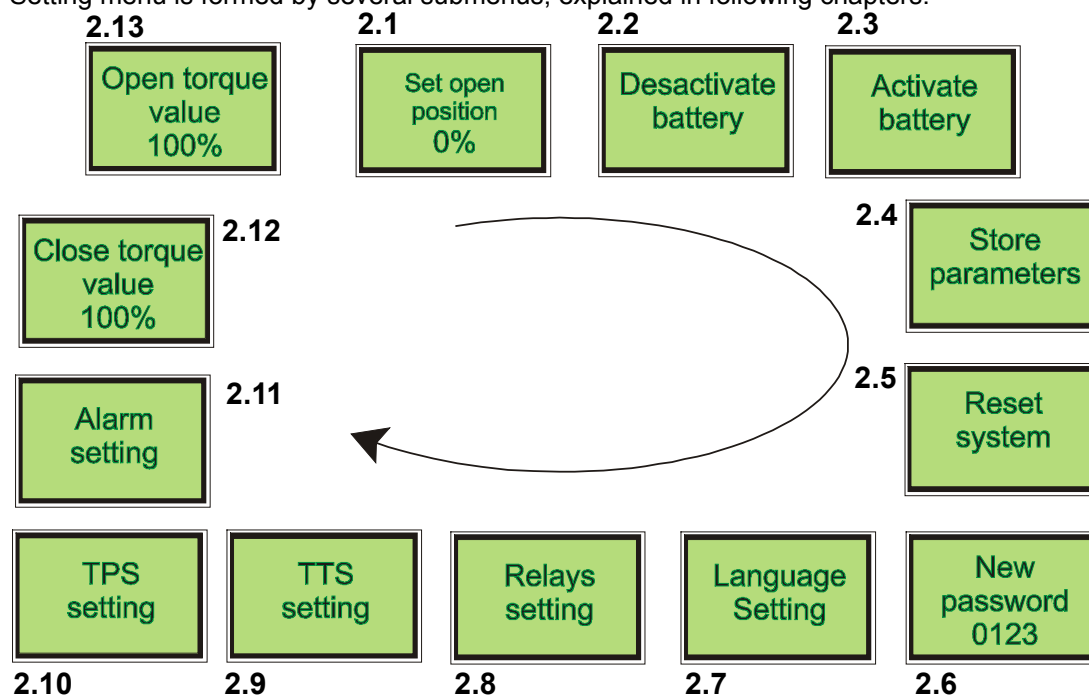

### 8.5.1 Set open position 0% (2.1 SCREEN):

This menu allows to set the Open position 0% (Valve Fully close) and 100% (Valve fully open)

- Run the valve to the desired close position (0%), electrically or manually –via handwheel-. Notice that when running, INDICATOR LAMPS will light on and off. That means that position sensor is working correctly. If user reverse the movement, colour sequence will reverse too.
- Keep pressing for 5 seconds “ENTER” pushbutton. After that, a OK message will appear. Press “ENTER” again to confirm.



Program will show a new screen: Setting open position 100% (Valve Fully open)

- Run the valve to the desired open position (0%), electrically or manually –via handwheel-. Notice that when running, INDICATOR LAMPS will light on and off, as well.
- Keep pressing for 5 seconds “ENTER” pushbutton. After that, a OK message will appear. Press “ENTER” again to confirm.

#### 8.5.2 Desactivate Battery (2.2 SCREEN)

This menu allows to desactivate the battery. It only must be employed just in case when long periods of storage are expected. See chapter 10.4

- Access to this submenu (2.2 SCREEN) and press "ENTER" to confirm the "desactivate battery" order. A OK screen will appear to indicate that option has been made.
- Press "ENTER" again to confirm.

#### 8.5.3 Activate Battery (2.3 SCREEN)

This menu allows to activate the battery. See chapter 10.4

- Access to this submenu (2.3 SCREEN) and press "ENTER" to confirm the "Activate battery" order. A OK screen will appear to indicate that option has been made.
- Press "ENTER" again to confirm.

#### 8.5.4 Store parameter (2.4 SCREEN)

This menu allows to store in memory the actual settings (Relays, program parameters...)

- Access to this submenu (2.4 SCREEN) and press "ENTER" to confirm "Store parameters" order. A OK screen will appear to indicate that option has been made.
- Press "ENTER" again to confirm.

#### 8.5.5 Reset system (2.5 SCREEN)

This menu allows to recover the default configuration and load it in memory. It can be useful when many undesired changes have been made. Notice that previous configurations will be erased!

- Access to this submenu (2.5 SCREEN) and press "ENTER" to confirm "reset system" order. A OK screen will appear to indicate that option has been made.
- Press "ENTER" again to confirm.

#### 8.5.6 New password (2.6 SCREEN)

This menu allows to change the password code.


- Access to this submenu (2.6 SCREEN) and press "ENTER" to confirm a "new password" command or order. Introduce your new password code, using "UP" and "DOWN" pushbuttons, press "ENTER" once you have selected one code, in order to go to next code.
- Finally press "ENTER" to confirm. A OK screen will appear to confirm that order was made. Press "ENTER" again to confirm.

#### 8.5.7 Language setting (2.7 SCREEN)

This menu allows to change the language employed on screens (texts and message).

- Access to this submenu (2.7 SCREEN) and press "ENTER" to confirm. Navigate through the screens using "UP" and "DOWN" pushbuttons, press "ENTER" once you have selected your language.
- Finally press "ENTER" to confirm. A OK screen will appear to confirm that order was made.
- Press "ENTER" again to confirm.


**2.7.1**

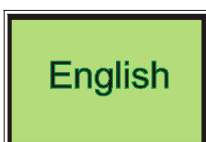

**2.7.2**



**2.7.3**

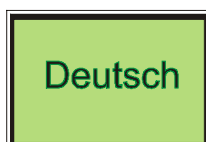

**2.7.4**



**2.7.5**



### 8.5.8 Relay setting (2.8 SCREEN)

This menu allows to configure and set the output RELAYS. Check terminal plan in order to know the number of RELAYS. RELAYS should be employed on electric manoeuvre (Wiring diagram) in order to control the actuator.




**Torque relays must be included on electric/electric manoeuvre in order to protect actuator and valve from undesired overloads.**


**RELAY 5 cannot be changed (It has a default configuration)**

Electric motor are powerful devices. Each valve manufacturer decides whether the switching off at both ends is made by torque switching or by limit switching. For technical data, consult CENTORK.


- Get into “Relay setting” submenu and press “ENTER” to access.
- The first RELAY screen will appear. Navigate through the Relay’s screens. Select the desired RELAY.
- Press “ENTER” to access.
- Select and set the relay state: “Normally closed” or “normally open”.
- Press “ENTER” to confirm.

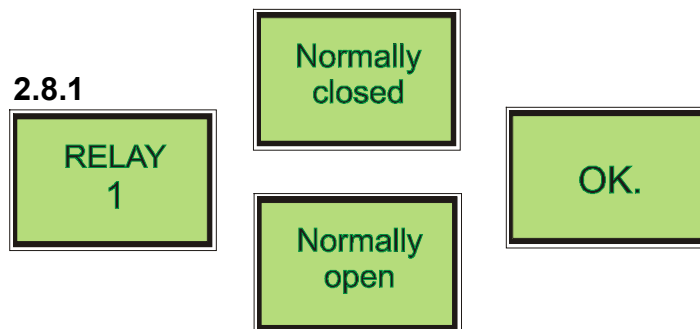

- Next step: Select the type of information for the RELAY: Different kind of RELAY information can be set:

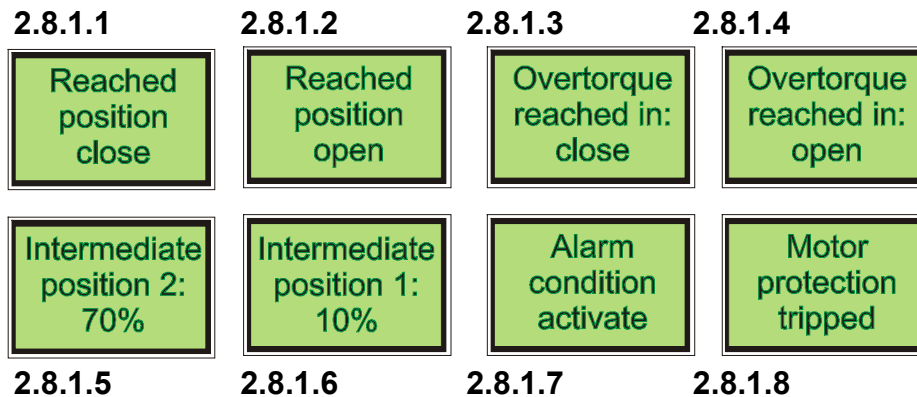

- Navigate through the different screens, employing “UP” and “DOWN” pushbuttons and press “ENTER” to select the desired information for this relay. A OK screen will appear to confirm that order was made.
- Press “ENTER” again to confirm.
- Repeat the process described, in order to set all RELAYS used.
- Press “C” in order to escape from “Setting” menu.

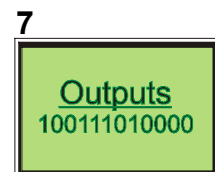

**Notice that there is an Outputs screen ( SCREEN 7) where it can be displayed the actual state of RELAYS**

**8.5.9 4-20 mA torque transmitter: TTS setting (2.9 SCREEN)**

This menu allows to set and configure the 4-20 mA torque signal, called TTS. TTS generates a 4-20 mA continuous signal proportional to TORQUE.

- Access to this submenu (2.9 SCREEN) and press “ENTER” to confirm.
- Then, a new screen will appear in order to select between Direct or reverse Polarity. Change between this screens, using “UP” or “DOWN” pushbuttons, press “ENTER” to confirm your choice.
- Finally set the type of Range: 4-20 mA/2-10V or 0-20 mA / 0-10 V.
- Finally press “ENTER” to confirm. A OK screen will appear to confirm that order was made. Press “ENTER” again to confirm.
- It is not necessary any additional calibration process. User only has to define or set the type of signal (Volts or mA).

**2.9.1.1**




**2.9.1.2**




**8.5.10 4-20 mA position transmitter: TPS setting (2.10 SCREEN)**

- This menu allows to set and configure the 4-20 mA position signal, called TPS. TPS generates a 4-20 mA continuous signal proportional to valve position. As limit end position CLOSE (0%) and OPEN (100%) are set, TPS automatically is set or auto-calibrated to its end values (4-20mA/2-10V or 0-20 mA or 0-10Volts).
- It is not necessary any additional calibration process. User only has to define or set the type of signal (Volts or mA).

**2.9.2.1**

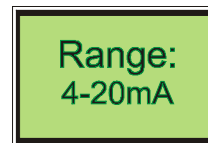

**2.9.2.2**

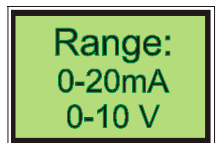

Process:


- Access to this submenu (2.10 SCREEN) and press “ENTER” to confirm.
- Then, a new screen will appear in order to select between Direct or reverse Polarity. Change between this screens, using “UP” or “DOWN” pushbuttons, press “ENTER” to confirm your choice.
- Set the type of Range: 4-20 mA/2-10V or 0-20 mA/0-10 V.
- Finally press “ENTER” to confirm. A OK screen will appear to confirm that order was made.
- Press “ENTER” again to confirm.

**8.5.11 Alarm setting (SCREEN 2.11)**


Different kind of event can be defined as ALARM signal. This submenu allows to set the ALARM signal which activates ON or OFF a RELAY (See Relay setting submenu, chapter 8.5.8).

- Alarms can be activated or no. Access to this submenu (2.11 SCREEN), navigate through the screens and select your choice pressing “ENTER”, then select between YES or NO in order to activate or not.


**2.11.1**

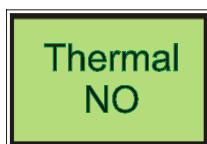


**2.11.2**

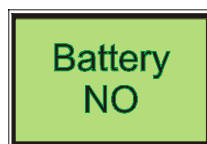

**2.11.3**

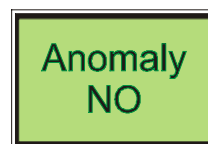

**2.11.3.1**

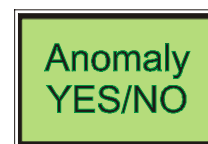

- Press “C” in order to escape from “Setting” menu.

**8.5.12 Torque close value (SCREEN 2.12)**

This menu allows to set the tripping torque for close direction. This value is expressed by a % of rated torque marked on actuator nameplate.

- Access to this submenu (2.12 SCREEN) and press “ENTER” to confirm. Set the desired value increasing/decreasing, using “UP” and “DOWN” pushbuttons, press “ENTER” once you have selected your value.
- Finally press “ENTER” to confirm.

### 8.5.13 Torque open value (SCREEN 2.13)

This menu allows to set the tipping torque for open direction. This value is expressed by a % of rated torque marked on actuator nameplate.

- Access to this submenu (2.13 SCREEN) and press “ENTER” to confirm. Set the desired value increasing/decreasing, using “UP” and “DOWN” pushbuttons, press “ENTER” once you have selected your value.
- Finally press “ENTER” to confirm.

## 9. SETTING AND PRELIMINARY TEST

- **Safety rules and standard should be observed (See SAFETY INSTRUCTIONS chapter)**
- Setting and preliminary test can only be done when finished the wiring and mounting on valve. Electric and electric manoeuvre and devices should be ready and checked.
- Both the torque and the limit switches setting must be carried out in accordance with the characteristics of the valve to be driven. **Each valve manufacturer decides whether the switching off at both ends is made by torque switching or by limit switching.**
- **If actuator has been supplied already assembled onto the valve by valve manufacturer, the settings made originally by the manufacturer should NOT be modified on site without the authorisation of the latter, otherwise, serious damage may be caused both to the valve and to the actuator.**



CENTORK recommend to move the valve to an intermediate position manually, -via handwheel device- (according to chapter 6) in order to execute the test routines described below, avoiding problems due to incorrect routines or user’s mistakes.




**User should not open covers for setting routines!**

### 9.1 Sense of rotation actuator and valve

Electric actuator and valve sense of rotation must be the same. Electric actuator sense of rotation criteria is **CLOCKWISE TO CLOCK**. Sense of rotation is critical for many components (RELAYS, sensors, 4-20 mA transmitter). A correct operation cannot be warranty in case of different sense of rotation valve/actuator)



- Operate the electric actuator via handwheel (See Manual operation chapter).
- Check that running the handwheel clockwise, valve moves to close. If the turn direction is not correct, stop immediately and verify.

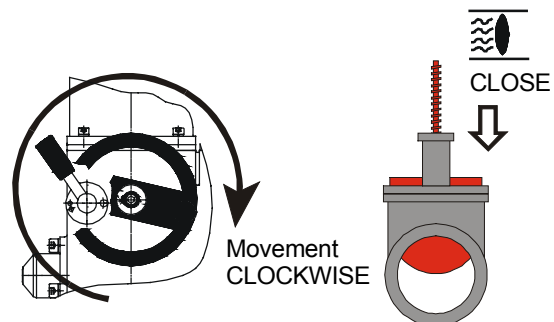


### 9.2 Motor and power supply (Sense of rotation)

**When running to close, electric actuator output shaft should turn in clockwise sense of rotation as well. If this does not happen, stop immediately!, and check:**




- For **three-phase A.C. motors**: Check that U-V-W phase sequence (Main voltage supply) is correct. Notice that U-V-W phases are wired to 1-2-3 motor contacts or terminals. Change two phases U-V-W on terminal blocks (e.g. U and V) and try it again.
- For **single-phase A.C. motors**: Verify the wiring (See figure)
- For **DC motors**: Check polarity on terminals!

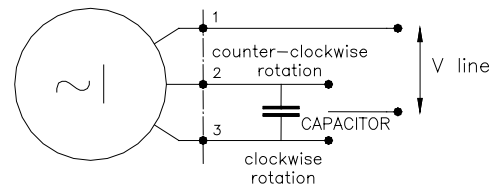



### 9.3 Closed position limit switch setting

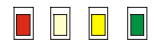

- Manually or electrically operate the valve to the desired CLOSED position.
- Access to “Settings” menu (See chapter 8.4)
- Access to “Set open position 0%” menu and set the “FULLY CLOSE” limit position (See chapter 8.4.1)
- Check that when opens, RELAY corresponding to “Reached position close” is switches off. (See Data operation menu, outputs submenu), also, INDICATOR LED will light off. Then go back to “fully close” position and check that Relay “Reached position close” switches on and INDICATION LED (n°4) lights on (GREEN).

### 9.4 Open position limit switch setting



- Manually or electrically operate the valve to the desired OPEN position.
- Access to “Settings” menu (See chapter 8.4)
- Access to “Set open position 100%” menu and set the “FULLY OPEN” limit position (See chapter 8.4.1)
- Check that when closes, RELAY corresponding to “Reached position open” switches off. (See Data operation menu, outputs submenu), also, INDICATOR LED will light off. Then go back to “fully open” position and check that Relay “Reached position open” switches on and INDICATION LED (n°1) lights on.

### 9.5 Close Torque switching setting

CENTORK electric actuators leave the factory tested and calibrated for its Max. Torque (100%) rated on nameplates, as standard.



**Guarantee is not valid if the user exceeds 100%, or if torque RELAYS are not employed on electric manoeuvre.**

- Access to “Settings” menu (See chapter 8.4)
- Access to “Torque close value” (SCREEN 2.12) and set the Torque value (%). Warning! Consult valve manufacturer for Thrust and torque allowable on valve!

### 9.6 Open Torque switching setting

CENTORK electric actuators leave the factory tested and calibrated for its Max. Torque (100%) rated on nameplates, as standard.



**Guarantee is not valid if the user exceeds 100%, or if torque RELAYS are not employed on electric manoeuvre.**

- Access to “Settings” menu (See chapter 8.4)
- Access to “Torque open value” (SCREEN 2.13) and set the Torque value (%). Warning! Consult valve manufacturer for Thrust and torque allowable on valve!

### 9.7 Intermediate limit switches

Electric actuator allows to set two intermediate signals (RELAYS). These positions can be set, as a percentage of total stroke (%)

- Access to “Settings” menu (See chapter 8.4)
- Access to “Relays settings” (SCREEN 2.9), select the proper “RELAY”, and set “Intermediate position 1” or “Intermediate position 2”. Set the % position employing “UP” and “DOWN” pushbuttons.

### 9.8 4-20 mA Position transmitter (OPTIONAL): TPS

As limit end positions (Valve fully OPEN and valve fully CLOSED) are set, TPS values (4-20 mA, or 0-20 mA or 0-10 Volt, see chapter 8.5.10) are auto-adjusted or calibrated according to those end of travel limits . They do not depend on valve stroke, number of turns.

## 10. MAINTENANCE

CENTORK actuators are supplied greased from the factory for their lifetime, needing practically no maintenance.

### 10.1 After commissioning

- Check for damage on paint caused by transport, assembly or handling and repair the damage carefully in order to ensure complete protection against corrosion.
- Make sure that all the o-ring seals are correctly mounted and that the cable glands are firmly fastened, and protection plug for cable entry not used have been replaced with metallic protection plug sealed with PTFE tape, in order to ensure the IP67, IP68 protection.
- The most important condition for reliable service of the CENTORK actuators is the fact of having carried out a correct commissioning and set-up procedure.

### 10.2 Maintenance for service

CENTORK recommends for a preventive maintenance programme: Approximately 3 months after commissioning and then every 9/12 months:

- Check the correct tightening of the bolts between the actuator and the valve. Retighten according to section 2 if required.
- Take advantage of each revision to check the proper tightening of the covers, of the handwheel lock and the external electric connection.
- Check cable entries
- Visual inspection inside of switching and signalling, and electrical compartments.
- Contact with valve manufacturer in order to know about maintenance routines of valve.

In the event of infrequent service, perform a test run every 6 months in order to ensure the availability of service of the actuator.

### 10.3 Electric actuator's service life

- Electric actuator service life is rated to 20.000 cycles.
- Each cycle is formed by an opening manoeuvre (Valve close position to valve open position) and a closing manoeuvre (Valve open position to valve close position).
- 50 turns has been considered as standard valve stroke reference.
- Operation data screen allows to check the number of cycles made.

### 10.4 Batteries

Torque and position control and measurement electronic unit has been designed with a very low energy consumption.

When main voltage is not supplied, electronic unit remains in a STAND BY state. Main screen will turn off, and INDICATION LEDS will light off, as well. Electronic unit will measure any change of valve position (E.g. operating manually –via handwheel-).

Electronic unit will check the battery level. Checking routines are made every 30 minutes. Low levels are indicated on screen employing a "battery symbol". In that case, connect to main power supply or replace battery. Batteries life is rated on 4 operation years, as average.

Replacing batteries:

- Battery is located inside of NON-INTRUSIVE frontal interface. Open this cover carefully, taking care of wires, and replace the battery. In some cases, it will be necessary to dismount some electronic boards in order to access to battery. In that case, once the battery has been replace, reconnect all wires.
- **Employ only CENTORK Battery spares!!**



## **11. TECHNICAL SUPPORT**

Each actuator is supplied with a datasheet on A4 format. The following is included:

- The nameplates attached to the actuator.
- The electric connection diagram for each actuator (also stuck inside the connections cover of the actuator).

For any claim or information request, the SERIAL NUMBER included on this datasheet or on the electric actuator nameplates should be used.

Electric actuator manufacturer address: See on Manual covers.

## **12. APPENDIX**

- OUTPUT TYPES
- FASTEN BOLTS (CLASS 8.8)
- WIRING DIAGRAMS, TERMINAL PLANS, LEGENDS AND SYMBOLS.
- D0105X1 DIAGRAM
- D0107X1 DIAGRAM

## OUTPUT TYPES


### OUTPUT TYPE A Size F-07 (ISO 5210)

#### Disassembly:

Employing a suitable tool, remove the retaining ring (3) which fix the removable bronze bush (1).  
Push in order to extract this piece.

#### Assembly:

Having machined the removable bush according to valve stem dimensions, refit the drive bus (1) into the output shaft bore, align the keyway (2) in its output shaft shape.  
Refit the retaining ring (3).

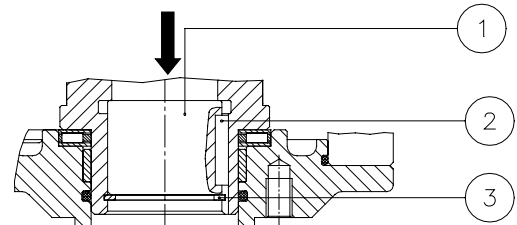

**Figure 1**

### OUTPUT TYPE A Size F-10/F-16/F-25 (ISO 5210)

#### Disassembly:


Push and press the removable bronze bush (2) in order to extract the cover (4), axial bearings (3) and removable bronze bush (2)

#### Assembly:

Having machined the removable bronze bush according to valve shaft, clean thoroughly this piece. Apply grease on axial bearings and discs (3). Assemble axial disc on removable bush (2), finally insert the cover (4). Check O-rings on cover.

Apply grease on. Insert the removable bush on output type A base casting unit and output shaft, notice that dog coupling (Tooth) on bushing should match with actuator hollow output shaft (1). Verify O-ring (4).

For maintenance, grease can be supply thought grease nipple (5).

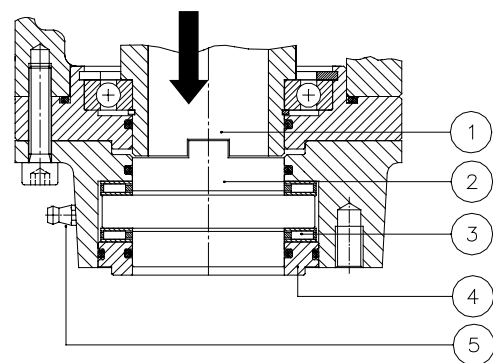

**Figure 2**


**OUTPUT TYPE A Size F-14 (ISO 5210)**

Disassembly

- Remove retaining ring (5) and unscrew the stop ring (4) employing a suitable tool.
- Push and press the removable bronze bush (1) in order to extract it.

Assembly:

- Having machined the removable bush according to valve stem dimensions, refit the drive bus (1) into the output shaft bore (3), align the keyway (2) in its output shaft shape.
- Screw the stop ring (4) employing a suitable tool.
- Refit the retaining ring (5).

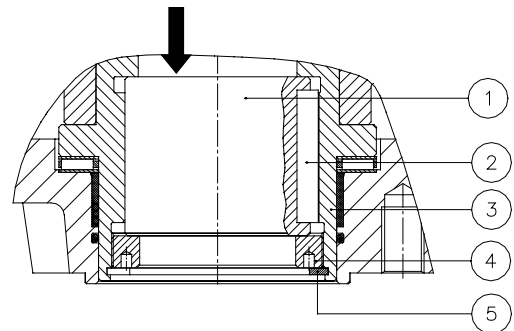

**Figure 3**


**OUTPUT TYPE B3 Size F-07/F-10/F-14/F-16/F-25 (ISO 5210)**

Disassembly:

- Employing a suitable tool, remove the retaining ring (4) which fix the removable steel bush (1).
- Push in order to extract this piece.

Assembly:

- Having machined the removable steel bush according to valve stem dimensions, refit the drive bus (1) into the output shaft bore, align the keyway (2) in its output shaft shape.
- Refit the retaining ring (4).

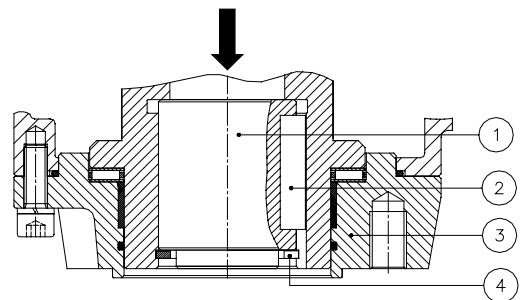

**Figure 4**

**OUTPUT TYPE B0 Size F-10 / F-14**


B0 output type is supplied, already machined, according to dimensions published in technical datasheets.

Disassembly:

- Employing a suitable tool, remove the retaining ring (3) which fix the removable steel bush (1). Removable bush is located inside of output shaft (2)
- Push in order to extract this piece.

Assembly:

- Having machined the removable steel bush according to valve stem dimensions, refit the drive bus (1) into the output shaft bore
- Refit the retaining ring (3).

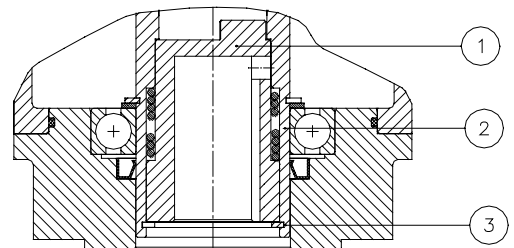







**Figure 5**

**FASTEN BOLTS (CLASS 8.8)**

<b>BOLT</b>	<b>FRICION FACTOR</b>		
	<b>LOW</b>	<b>MEDIUM</b>	<b>HIGH</b>
<b>M4</b>	4.2	6	8
<b>M6</b>	6.2	8.2	10
<b>M8</b>	15	21	24
<b>M10</b>	30	41	48
<b>M12</b>	49	68	85
<b>M14</b>	85	108	130
<b>M16</b>	130	165	200
<b>M18</b>	170	240	280
<b>M20</b>	240	340	410
<b>M30</b>	800	1150	1350
<b>M36</b>	1450	2050	2400


Torque values in N.m  
Steel bolts class 8.8

    
## WIRING DIAGRAMS, TERMINAL PLANS, LEGENDS AND SYMBOLS

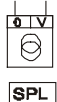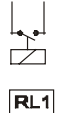SYMBOL	DESCRIPTION	TECHNICAL FEATURES
	<b>MOTOR:</b> A.C. motor (single and three-phase)	<ul style="list-style-type: none"> <li>- Squirrel cage motor.</li> <li>- Isolation class F.</li> <li>- Main power supply: See motor nameplates.</li> <li>- Main voltage supply tolerance: <math>\pm 5\%</math></li> </ul>
	<b>SUPPLY SOURCE:</b> Supply source (Voltage) for Torque and position control and measurement electronic unit	120v ( $\pm 18\%$ ) 50/60Hz 230v ( $\pm 14\%$ ) 50/60Hz 446v ( $\pm 23\%$ ) 50/60Hz
	<b>RELAY:</b>	Switching rating (Imax) for 250VAC: 10A ( $\cos\phi=1$ ) Switching rating (Imax) for 30VDC: 10A (resistive load)
	<b>BLK:</b> Movement signalling unit (Blinker).	Type: Transistor Voltage: 24VDC Max current: 100mA
	<b>TPS:</b> Electronic Position transmitter	2 wire active system Maximum load for current transmissor: 500 $\Omega$ Minimum load for tension transmissor: 1000 $\Omega$
	<b>TTS:</b> Electronic Torque transmitter	2 wire active system Maximum load for current transmissor: 500 $\Omega$ Minimum load for tension transmissor: 1000 $\Omega$

For further technical information, consult CENTORK technical datasheet or contact directly with CENTORK. CENTORK address can be found printed on manual covers.

Next terminal plan shows a typical scheme of a electric actuator with all of optional elements:

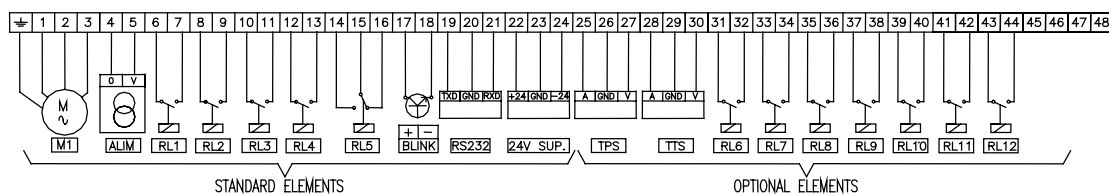

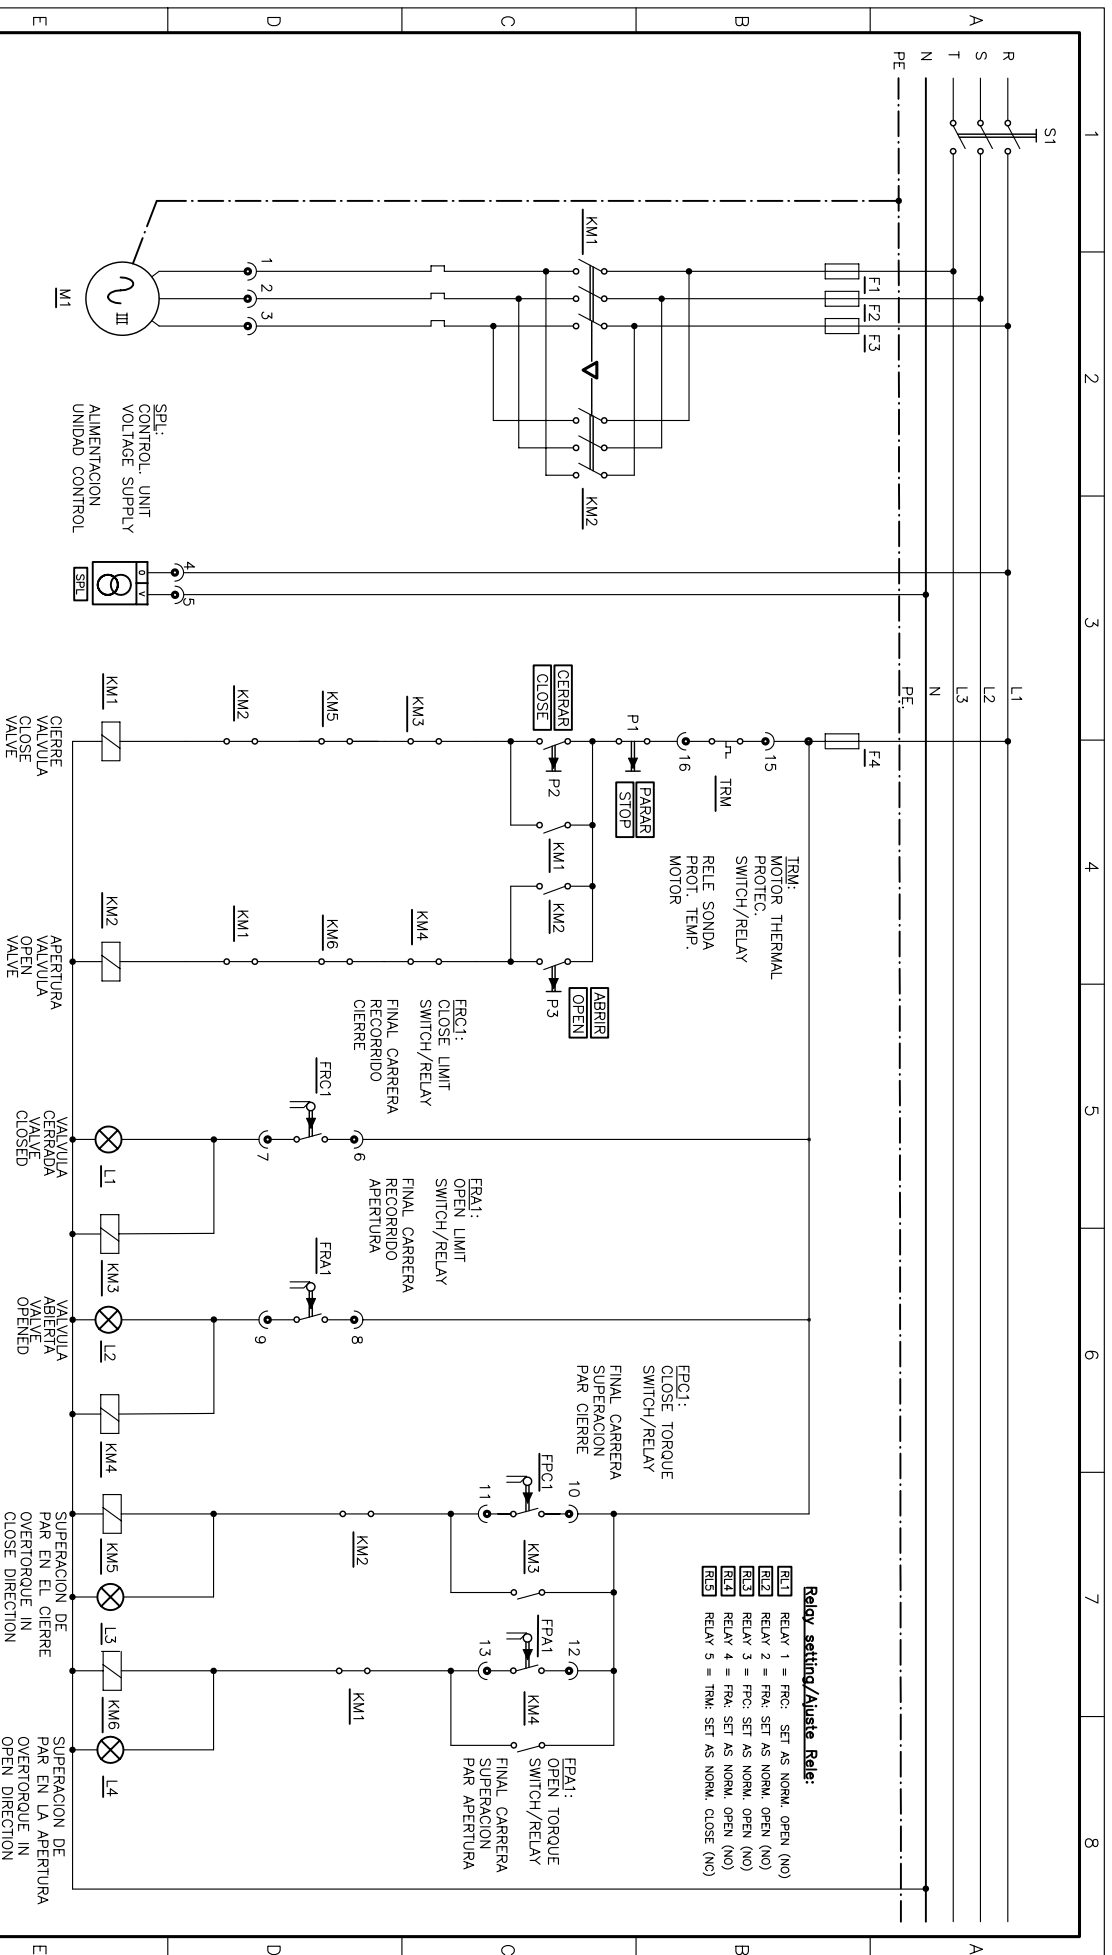

- Relay setting/Adjuste Relay:**
- [REL1] RELAY 1 = FRC: SET AS NORM, OPEN (NO)
  - [REL2] RELAY 2 = FRA: SET AS NORM, OPEN (NO)
  - [REL3] RELAY 3 = FPG: SET AS NORM, OPEN (NO)
  - [REL4] RELAY 4 = FRA: SET AS NORM, OPEN (NO)
  - [REL5] RELAY 5 = TRM: SET AS NORM, CLOSE (NC)

**CIERRE/APERTURA POR LIMITE DE RECORRIDO**

—En caso de superacion de por cortamos cierre/apertura.  
—Si se supera por permite volver a intentar cierre/apertura realizando previamente movimiento contrario al que origino superacion de por

**OPEN/CLOSE BY LIMIT SWITCHING**

—Case of overtorque, stops open/close action.  
—Case of overtorque, allows open/close action after having done close/open action.

MODIFICACION	FECHA	FECHA	FIRMA	CIERRE/APERTURA POR LIMITE DE RECORRIDO	OPEN/CLOSE BY LIMIT SWITCHING
A	-	12/08/04	AF	DIBUJADO	
B	-	12/08/04	AF	REVISADO	
C	-	12/08/04	IM	VERIFICADO	
D	-	-	-	ESCALA	
E	-	-	-	-	
F	-	-	-	-	
G	-	-	-	-	



Propiedad de CENTRALAIR S.A. prohibida su utilizacion  
reproduccion y distribucion sin autorizacion expresa por escrito


REPRODUCIDO EN OTRAS ZONAS SIN INDICACION

TOLERANCIAS GENERALES DIMENSIONALES AGUJEROS: H12  
EJES: h12, ROSCAS: GRADO MEDIO, LONGITUDES: J612

FORMATO N° DE PLANO N°: 1 de 1

A3 D0105X1



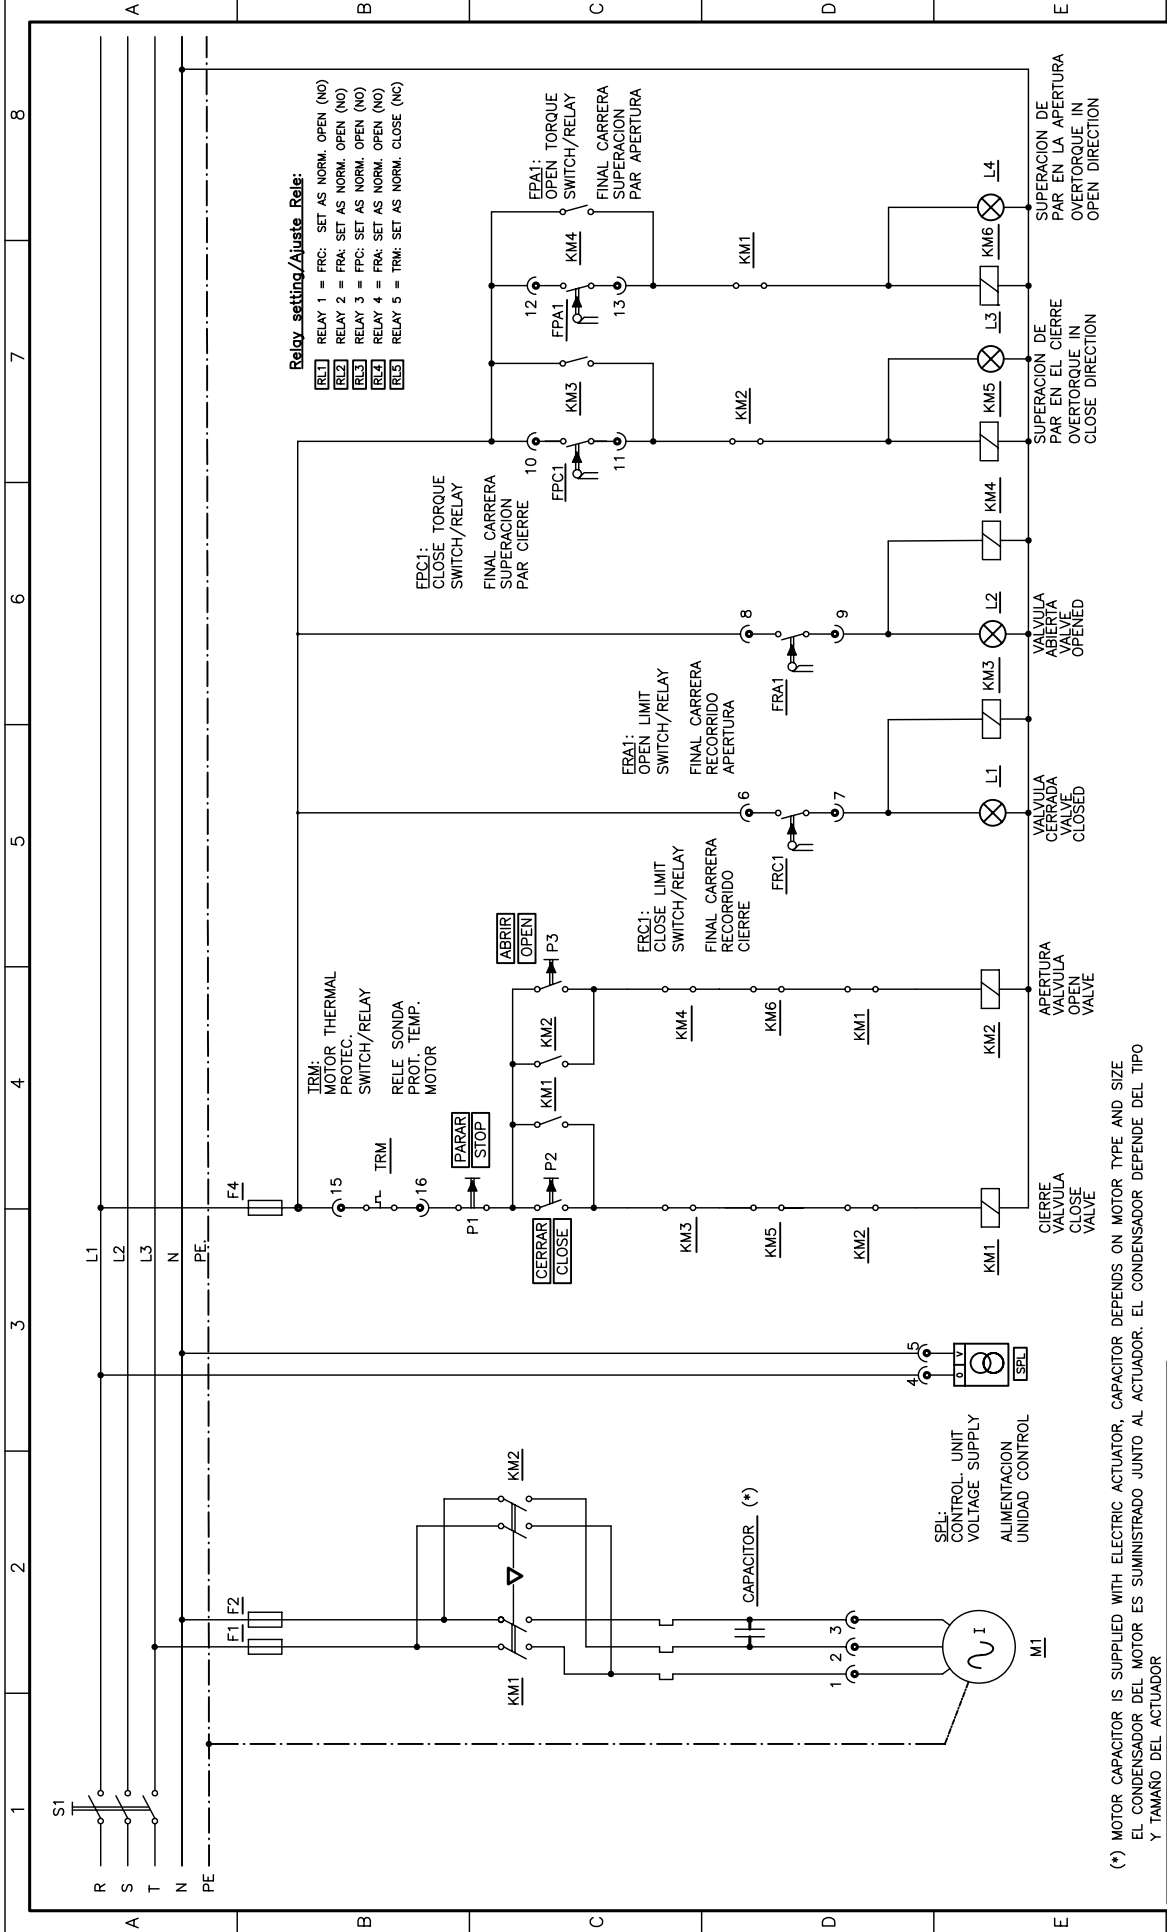

(\*) MOTOR CAPACITOR IS SUPPLIED WITH ELECTRIC ACTUATOR, CAPACITOR DEPENDS ON MOTOR TYPE AND SIZE  
 EL CONDENSADOR DEL MOTOR ES SUMINISTRADO JUNTO AL ACTUADOR. EL CONDENSADOR DEPENDE DEL TIPO Y TAMAÑO DEL ACTUADOR

**CIERRE/APERTURA POR LIMITE DE RECORRIDO**  
 -En caso de superacion de par cortamos cierre/apertura.  
 -Si se supera par permite volver a intentar cierre/apertura realizando previamente movimiento contrario al que origino superacion de par

**OPEN/CLOSE BY LIMIT SWITCHING**  
 -Case of overtorque, stops open/close action.  
 -Case of overtorque, allows open/close action after having done close/open action.

MODIFICACION	FECHA	FECHA	FIRMA
A	-	12/08/04	AF
B	-	12/08/04	AF
C	-	12/08/04	IM

**CIERRE/APERTURA POR LIMITE DE RECORRIDO**  
**OPEN/CLOSE BY LIMIT SWITCHING**

Propiedad de CENTRALAIR S.A. prohibido su utilizacion  
 reproduccion y distribucion sin autorizacion expresa por escrito

RECORRIDO EN OTRAS ZONAS SIN INDICACION

TOLERANCIAS GENERALES DIMENSIONALES AGUIEROS: H12  
 EJES: h12, ROSCAS: GRADO MEDIO, LONGITUDES: Js12

FORMATO N° DE PLANO: A3  
 HOJA N°: 1 de 1







## **CENTORK Valve Control S.L.**

Camino Portuetxe, 23 SAN SEBASTIAN 20.018 (SPAIN)  
Telf.: +34.943.31.60.31 Fax.: +34.943.21.76.75  
Email: [actuator@centork.com](mailto:actuator@centork.com) <http://www.centork.com>

**MANE1460X001**

**Edition: 01.06**